

**Laptop/PC network configuration to connect with  
smartDirectors **ETH1/Gb2** port or smartEngines **AUX** port  
(for Windows and Mac OS Operating Systems)**



## Table of Contents

<b>INTRODUCTION .....</b>	<b>3</b>
<b>Windows Operating System .....</b>	<b>3</b>
<b>Mac OS Operating System .....</b>	<b>6</b>

## INTRODUCTION:

This document covers instructions for manually setting up an IP address on your PC/laptop in order to communicate directly with the smartEngine's **AUX** port or smartDirector's **ETH1/Gb2** port over a wired ethernet connection. **Note:** *In the example, we are using Windows 10 and Mac OS Sierra Operating systems.*


## Windows Operating System:

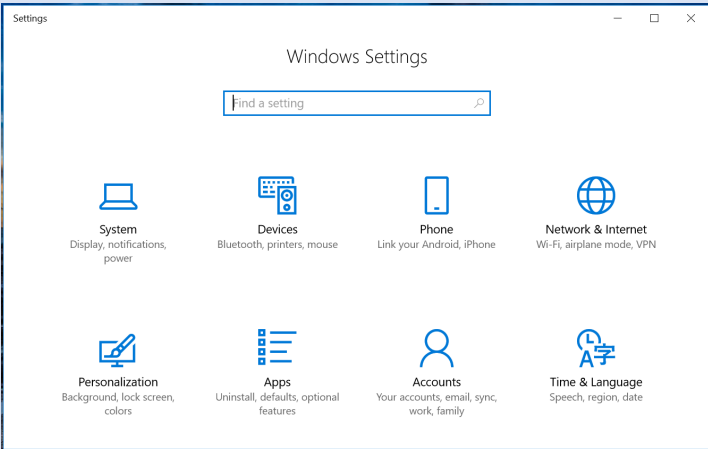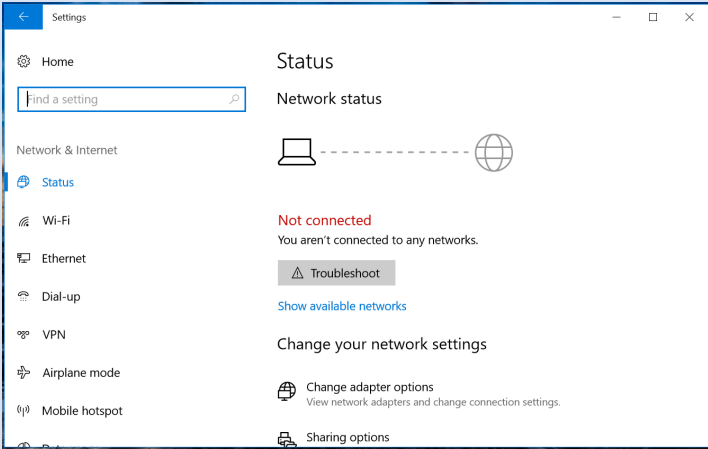Steps to follow	This is what you will see
<p><b>Step 1.</b></p> <p>Click the Start icon (or press Start button on the keyboard), and then tap or click <b>Settings</b>.</p> <ul style="list-style-type: none"> <li>The Settings page appears</li> </ul>	
<p><b>Step 2.</b></p> <p>Click on <b>Network and Internet</b>.</p> <ul style="list-style-type: none"> <li>The Network and Internet page is displayed.</li> </ul>	

### Step 3.

Click on **Ethernet**.


- The Ethernet settings page appears.

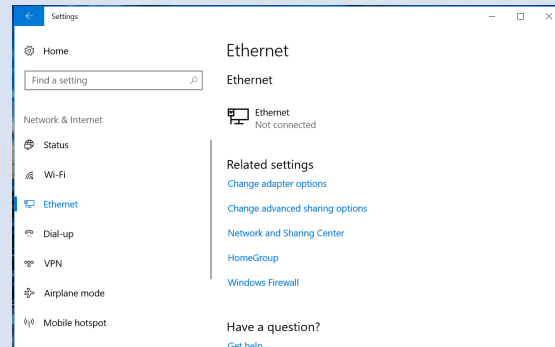

### Step 4.

Click on **Change Adapter Options**


- The Network Connections page is displayed. This page lists each of your network adapters.

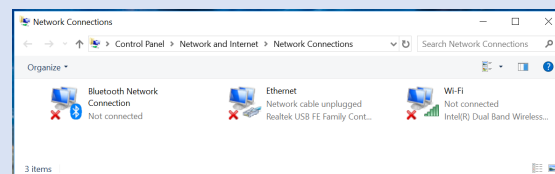

### Step 5.

Right Click on the **Ethernet** connection and choose **Properties** from the drop-down menu.


- This will open up the Ethernet Properties Dialog box.

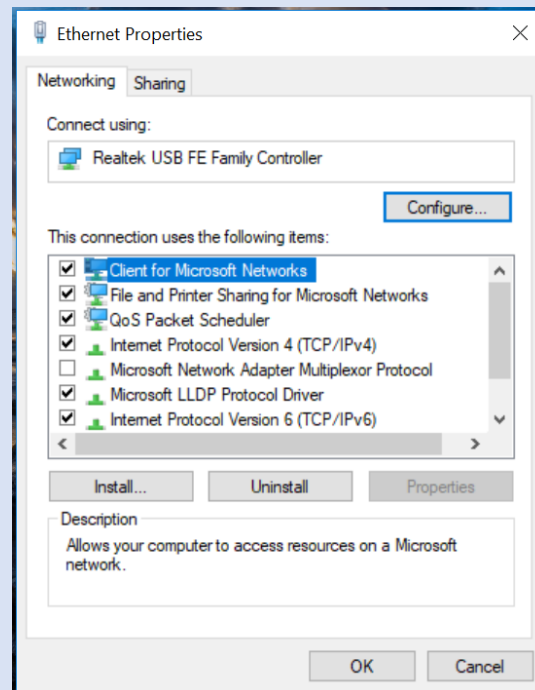

## Step 6.

Select **Internet Protocol Version 4 (TCP/IPv4)** and click on the **Properties** button.

- The TCP/IP Version 4 (TCP/IPv4) Properties dialog box will appear.

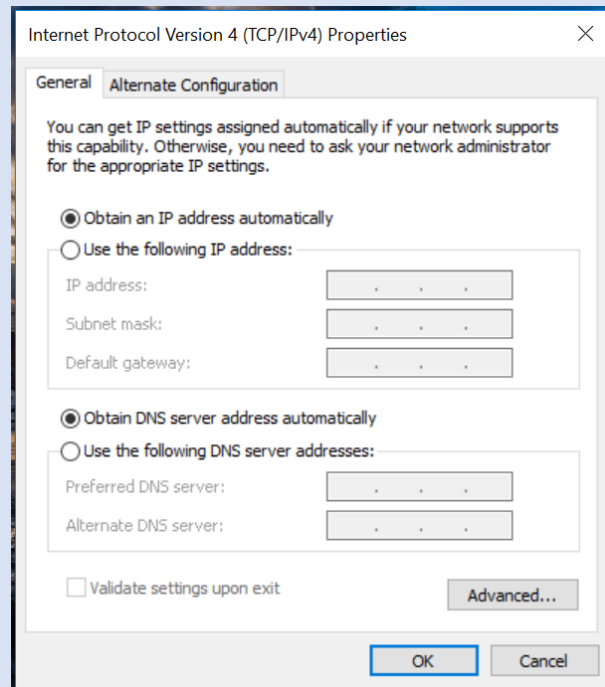


## Step 7.

**Note:** If any of the fields are already populated in this dialog box as well as the “Advanced...” section, please take a screenshot or write them down as they appear. This is because we can revert back to the original network adapter settings after we are done.



Select the radio button for “**Use the following IP address:**” and fill them out with the following information as listed.

- IP address: 192.168.1.10
- Subnet mask: 255.255.255.0
- Default gateway: 192.168.1.1

Click on the **OK** button when done followed by clicking on the **OK** button of the **Ethernet Properties** dialog box.

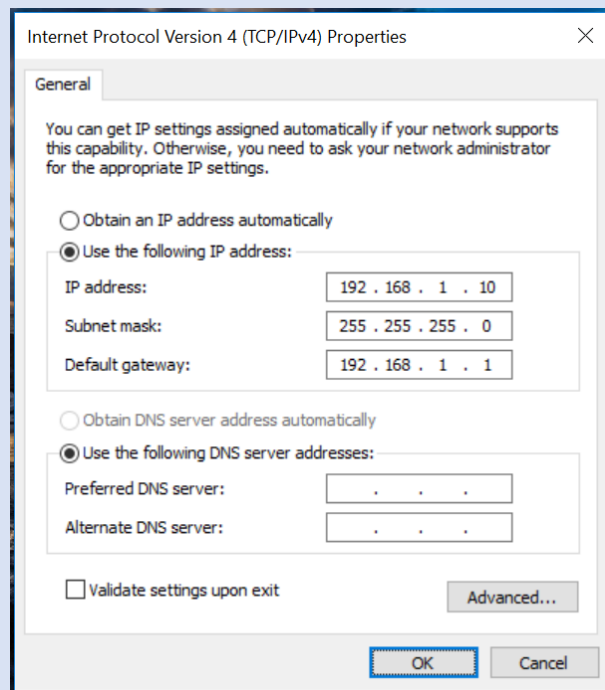


## Mac OS Operating System:

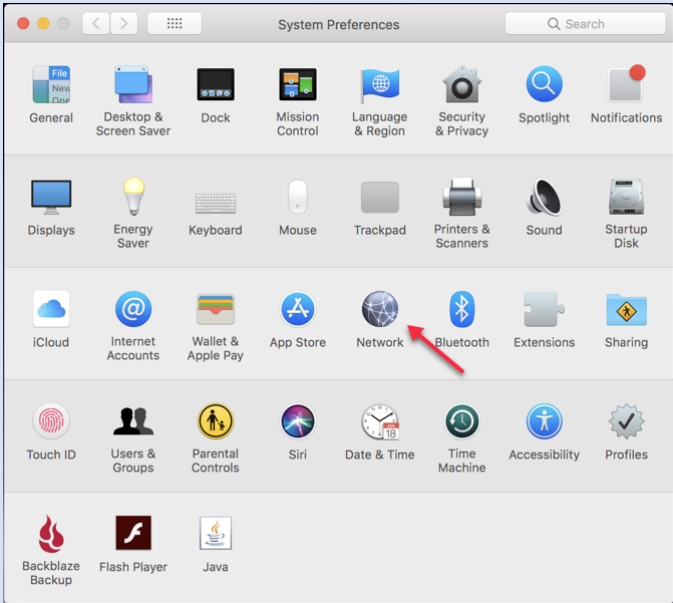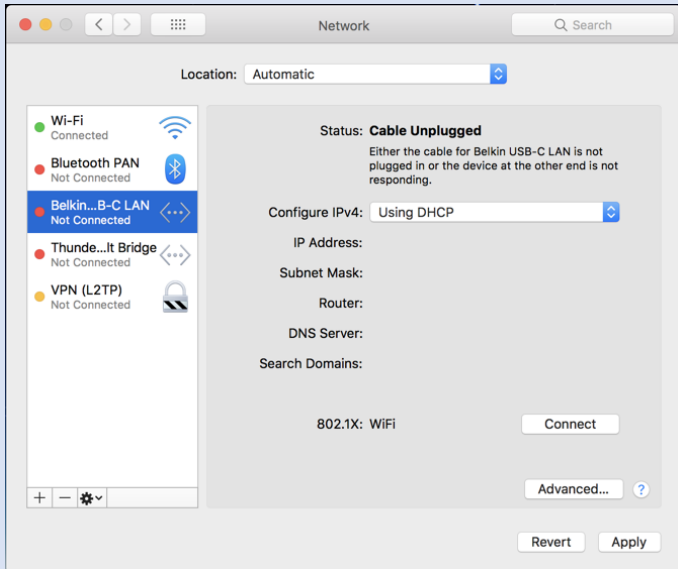Steps to follow	This is what you will see
<p><b>Step 1.</b></p> <p>Choose <b>Apple</b> menu and select <b>System Preferences...</b></p> <ul style="list-style-type: none"> <li>The System Preferences window will open up</li> </ul>	
<p><b>Step 2.</b></p> <p>Click on <b>Network</b> icon in System Preferences.</p> <ul style="list-style-type: none"> <li>The Network pane will be displayed</li> </ul>	


### Step 3.

Select the network connection you want to modify (such as Ethernet) in the list shown on the left-hand side.

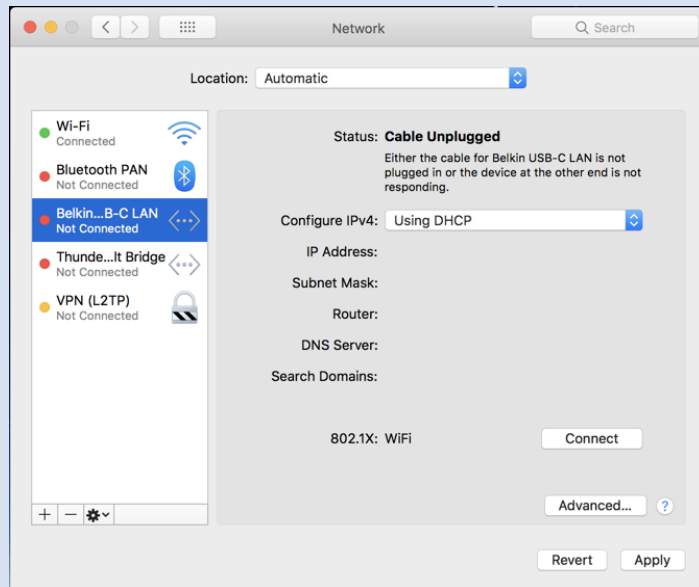

### Step 4.

Click on **Configure IPv4** drop-down menu on the right-hand pane and choose **Manually**.

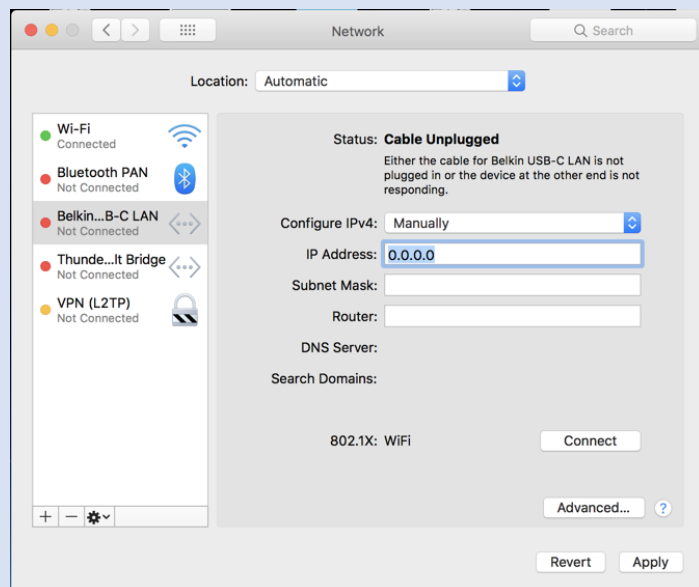

### Step 5.

Fill out the fields as follows:

- IP Address: 192.168.1.10
- Subnet Mask: 255.255.255.0
- Router: 192.168.1.1

...and click on the **Apply** button upon completion.

